

USER'S GUIDE

Applicable to the following remote(s)
FTX2400R-SS - 2 way, 4 Button LED Remote

Remote	FCC ID Number (US Only)	IC ID Number (International Only)
FTX2400R-SS	VA5JR1040-2WSSL	7087A-2WR1040SSL

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions;

- (1) This device may not cause harmful interference.
- (2) This device may accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Table Of Contents

Introduction	4	General System Functions	12
Warranty Coverage	4	● Active Lock / Arm and Unlock / Disarm	12
Quick Reference	5	● Passive Lock / Arm	13
● Valet Mode	5	● Automatic Transmission Remote Start Function	13
● Remote Maintenance – Battery Replacement	6	● Manual Transmission Remote Start Function (Reservation Mode)	14
● 2 Way Remote Button Functions	7	● Trunk Release	15
● 1 Way Remote Remote Functions	9	● AUXiliary Output / Window Roll–Down / Sliding Doors	16
Remote LED Functions and Descriptions	11	● Silent Arm / Disarm	16

Table Of Contents


Advanced System Functions	17	Remote Start Error Diagnostic	21
● Drive Lock / Ignition Controlled Door Locks	17	Limited Lifetime Warranty	22
● Turbo Timer Mode	17		
● 2 nd Car Mode (Multiple Vehicle Control)	18		
● Secure Valet Switch	18		
● Timer Start Mode	19		
● Cold / Hot Start Mode	19		
● More Optional Sensors	19		
Remote Coding / Programming Routine(s)	20		
● Programming 2Way 4Button Remotes	20		

Introduction

Thank you for purchasing a Firstech system for your vehicle. In order to truly enjoy the benefits of this system, we recommend that you thoroughly review the following manual. Please note that this manual applies to the FTX2400R-SS Remotes. It is not compatible with ALARM IT or MAX IT systems. This manual also supports the 1 Way remote that is included in your new RF Kit. Please note that there are certain features listed in this manual that may not be available for your system. There may also be features listed in this manual that require additional installation or programming before they become active.

If you have any questions, please contact the original place of purchase. For further information you may also contact our customer support center by calling 888-820-3690.

Warranty Coverage

 **Caution:** The Manufacturer's warranty will be voided if this product is installed by anyone other than an Authorized Firstech dealer. For complete warranty details visit www.compustar.com or the last page of this manual. Firstech remotes carry a 1 year warranty from original date of purchase. CompuStar Pro remotes carry a 2 year warranty.

Warranty registration can be completed online by visiting www.compustar.com. Please complete the registration form within 10 days of purchase. We do not include a mail in warranty registration card with each unit - registration must be done online. To verify that an authorized dealer installed your system, we highly recommend that you keep a copy of the original proof of purchase, such as the dealer invoice in a safe place.

Quick Reference

Valet Mode

When servicing or loaning your vehicle to others, the system should be placed in Valet Mode. Valet Mode prevents the system from remote starting and disables all alarm functions.

IMPORTANT: While in Valet mode the remote will still control power lock and unlock systems. The parking lights will not flash. Also the confirmation chirps from the 2 Way remote will be shorter.

The system can be put into valet one of three ways:

ZZzz

1. Turn the vehicle's key to the ignition on position and tap buttons (🔑 + 🔊) simultaneously for a half second. The parking lights will flash once and/or siren chirp once to confirm the system is in valet mode. Repeat this process to take the system out of valet mode. The parking lights will flash twice and/or siren chirp once to confirm the system is out of valet mode.

2. If you do not have your remote control, you can put the system into valet by turning the ignition key on and then off five times within 7 seconds. The parking lights will flash once to confirm the system is in valet mode. Shortly after the first flash, the parking lights will flash twice. A remote control is required to take the system out of valet mode.

IMPORTANT: If your system is set up for a secure valet option, you will not be able to put the system into valet until the proper code has been entered to the secure valet switch.

3. If your system is set up for the secure valet option (optional), you will not be able to put the system into valet until the proper code has been entered to the secure valet switch. The secure valet switch is the small button with bright blue LED on the front and if installed is the only way to override the alarm and/or remote start. Until programmed, the default code is (3, 3).

Removing System Out of Valet:

Tap the (🔑 + 🔊) for a half second to remove the system out of Valet. On starter and alarm/starter systems, you can turn the key to the Ignition On position and tap the foot brake 10 times. This will take your system out of Valet Mode. If this does not work you can also reprogram your remote(s). See Remote Coding/Programming Routine section for details.

Quick Reference

Remote Maintenance—Battery Replacement



When the battery on your 2 Way remote is low, you will no longer receive 2 Way confirmation in areas you usually do. Your remote will only send commands to your vehicle. The LEDs on your 2 Way remote will also fade after transmission.
The only regular maintenance this system requires is remote control battery replacement. No programming is required when replacing the battery.

Two Way Remotes:

Use a quarter or flat head screwdriver to pry the back cover off of the remote. You can insert the quarter or flat head in the small slot at the bottom of the remote by the keychain loop. Carefully pry off the back cover using caution that you do not damage the circuit board. Your battery size should be listed on the battery. (Battery size: CR2450)

IMPORTANT: Be sure to observe correct polarity when installing the battery.

One Way Remotes:

Use a quarter or flat head screwdriver to pry the back cover off of the remote. You can insert the quarter or flat head in the small slot at the bottom of the remote by the keychain loop. Carefully pry off the back cover using caution that you do not damage the circuit board. Your battery size should be listed on the battery. Battery size: Two (2) CR2016) Replacements can be purchased from your local Firstech dealer or an electronics store.





 



 











 


 



 


 


 






 









Quick Reference

2 Way Remote Button Functions

Button(s)	Duration	Function	LED Icon-Blue	LED Icon-Red 2nd Car Mode	Chirp(s)
	Half second	Locks doors and/or arms alarm.			Once
	3.5 seconds	Panic/vehicle locator (flashes vehicle's parking lights and sounds siren and horn).			N/A
	Half second	Unlocks doors and/or disarms alarm.			Twice
	2.5 seconds	Resets the run time or turbo timer			Three
	Half second	Aux 1. Triggers the auxiliary 1 output (most commonly used for rear defrost or window roll-down).			Once
	2.5 seconds	Trunk release. Triggers the trunk release output and opens the vehicle's trunk.			Twice
	Half second	Aux 2. Triggers the auxiliary 2 output (most commonly used for rear defrost or window roll-down).			Once
	2.5 seconds	Activates the remote start. Repeat and remote start will shut off. Will activate Stop and Go Mode if held when vehicle is running with the key.			Once On / Twice Off
	Half second	Turns siren chirps on/off (Note: With the siren chirps off, it will still sound in the event the alarm is triggered).			Once On / Twice Off
	2.5 seconds	Option programming menu 1 - Installers Only.			Once


 





 




Quick Reference

2 Way Remote Button Functions

Button(s)	Duration	Function	LED Icon-Blue	LED Icon-Red 2nd Car Mode	Chirp(s)
 + 	Half second	Valet mode (see Valet Mode Section for details)	   	   	Once On / Twice Off
 + 	Half second	Drive lock. Activates ignition controlled door locks	   	   	Once On / Twice Off
	2.5 seconds	Option programming menu 2 - Installers Only.			Once
 + 	Half second	Activates passive arming (vehicle will arm/lock 30 seconds after the vehicle is disarmed)	   	   	Once On / Twice Off
 + 	Half second	Activates timer start mode. Timer start mode has multiple programmable settings: duration settings, temperature settings and self start settings.	   	   	Once On / Twice Off
	2.5 second	Puts your remote into 2nd Car Mode. You can control another vehicle with the same remote as long as it has the same RF Kit installed.			Once On / Twice Off
 + 	Half second	Activates the built in Turbo Timer function. Additional installation is required when using this feature on automatic transmission vehicles.	   	   	Once On / Twice Off
	2.5 seconds	Car Check (updates vehicle status on remote) / Secure Auxiliary			Twice





 


 
 
Quick Reference

1 Way Remote Button Functions

Button	Duration	Additional Programming Required	Function / Description
 / 	Half second	no	Locks doors and / or arms alarm.
	3.5 seconds	no	Panic/vehicle locator (flashes vehicle's parking lights and sounds siren and horn)
	Half second	no	Unlocks doors and / or disarms alarm.
	Half second	no	Aux 1. Triggers the auxiliary 1 output (most commonly used for rear defrost or window roll-down)
	2.5 seconds	no	Trunk release. Triggers the trunk release output and opens the vehicle's trunk.
 / 	Half second	no	Aux 2. Triggers the auxiliary 2 output (most commonly used for rear defrost or window roll-down)
	2.5 seconds	no	Activates the remote start. Repeat and remote start will shut off
 /  + 	Half second	no	Turns siren on/off (Note: With the siren off, it will still sound in the event the alarm is triggered)
	2.5 seconds	no	Option programming menu 1 - Installers Only
 /  + 	Half second	no	Valet mode (see Valet Mode section for details)
	2.5 seconds	no	Turns the shock sensor on/off. (Alarm or alarm / Starter systems only)

Quick Reference

























1 Way Remote Button Functions

Button	Duration	Additional Programming Required	Function / Description
( +  + )	Half second	yes	Drive lock. Activates ignition controlled door locks.
	2.5 seconds	no	Option programming menu 2 - Installers Only
( + )	Half second	no	Activates passive arming (vehicle will arm/lock 30 seconds after the vehicle is disarmed)
( + )	Half second	yes	Activates timer start mode. Timer start mode has multiple programmable settings: duration settings, temperature settings and self start settings
( + )	Half second	yes	Activates the built-in Turbo timer function. Additional installation is required when using this feature on automatic transmission in vehicles
	2.5 seconds	no	Car Check / Secure Auxiliary

If you would like additional information on the functionality of your 1 Way companion remote, please visit the owner's corner at www.compustar.com to download the full user manual.

Remote LED Functions and Descriptions


Your remote will communicate to and from your vehicle while in range. The unique icon LED design will display LEDs indicating lock/unlock status, remote start confirmation, remaining run time and much more.

Event	LED Icon	LED Duration	Chirp(s)
Runtime Remaining: 100 Percent	   	Once every 5 seconds	Six times
Runtime Remaining: 75 Percent	   	Once every 5 seconds	N/A
Runtime Remaining: 50 Percent	   	Once every 5 seconds	N/A
Runtime Remaining: 25 Percent	   	Once every 5 seconds	N/A
All command confirmations	   	Once or Twice depending on function	Once or Twice depending on function
All error confirmations	   	The icon LEDs will blink according to which button(s) caused the error.	Three chirps

General System Functions

The remote transmitter functions have been predetermined and programmed from the factory. The four button configuration allows for many functions to be performed through a series of tapping, holding and / or multiple presses of buttons.

Sending Commands

When in range and a command has been sent, the remote will receive a page back and LED command. For example, to send a remote start command from the 2 Way remote, hold down the  button for 2.5 seconds. The remote will beep once to confirm the command has been sent and that the remote is in range. Once the vehicle has successfully remote started, the remote will receive a command indicating the vehicle is running.

Receiving Commands


The remote pager will receive commands indicating the status of the vehicle, confirmation of sending commands and remote start notifications. For example, after sending the lock command, the pager will receive LED and chirp signals confirming that the vehicle has been successfully locked/armed. To see if your pager is in range, hold the  +  buttons for 2.5 seconds - if the remote receives an audible and visual confirmation then it is in range.

IMPORTANT: the FTX2400R-SS does not receive page back alerts if an alarm is triggered only while your vehicle is remote started.

Active Lock / Arm and Unlock / Disarm



Tap button  for a half second to lock/arm. The lock icon will flash on your remote. If your vehicle is locked, tap button  to unlock; if your vehicle is unlocked, tap button  to lock.

IMPORTANT: If the alarm has been triggered (Siren is going off), you must wait up to 5 seconds before disarming the alarm - the first  button tap will shut off the alarm and the second will unlock/disarm the system.

General System Functions

Passive Lock / Arm



The system can be configured to passively lock and arm the vehicle. Put the system in passive by tapping  +  buttons simultaneously for a half second. The remote will beep once and the LEDs will illuminate to indicate the system is in passive lock and arming mode.

While in passive mode, the system will lock and arm the alarm 30 seconds after the last door is closed. As an indicator that the vehicle is going to passively lock and arm, the remote and siren will chirp once and the parking lights will flash once at both 10 and 20 seconds prior to passively locking and arming. If you want the system to passively arm and not passively lock, ask your local Firstech dealer to turn Option 1-8 to setting II.

Automatic Transmission Remote start Function

Hold the  button for 2.5 seconds to remote start an automatic transmission vehicle. If you are in range and if the vehicle is ready to remote start, the parking lights will flash once and/or siren chirp once to indicate that the remote start command has been successfully transmitted.



If you are in range and the remote beeps three times, there is a remote start error. Refer to the remote start error diagnostic on the last page of this manual for details.

Upon receiving confirmation that your vehicle is running, the remote LEDs will flash the and remote beep to show the run time. The remote start run time can be programmed for 3, 15, 25, or 45 minutes - ask your local Firstech dealer to adjust Option 2-7 if you would like a run time other than 15 minutes (default).

IMPORTANT: Your vehicle's key must be inserted into the ignition and turned to the on position prior to driving your vehicle. If the foot brake is depressed prior to the key being in the on position, the vehicle will shut off.

General System Functions

Manual Transmission Remote Start Function (Reservation Mode)

In order to remote start a manual transmission vehicle, the system must first be set in Reservation Mode. Reservation Mode must be set each and every time you want to remote start a manual transmission vehicle. The purpose of Reservation Mode is to leave the transmission in neutral before exiting the vehicle.

IMPORANT

- The transmission must be left in the neutral position.
- The vehicle's windows must be rolled up.
- The vehicle's door pins must be in working order.
- Do not set reservation mode or remote start with people in the vehicle.
- Do not install this remote start on a manual transmission vehicle that has a convertible or removable top.

Activating Reservation Mode

STEP 1: While the vehicle is running, place the transmission in neutral, set the emergency / parking brake, and remove pressure from the foot brake.

STEP 2: Remove the key from the vehicle's ignition. The vehicle's engine should remain running even after the key has been removed. If the vehicle does not remain running visit your local authorized Firstech dealer for service.

STEP 3: Exit the vehicle and close the door. The vehicle's engine should shut off instantly or within 10 seconds upon closing the last door. If the vehicle's engine does not shut off, your door trigger may be functioning improperly. Do not use the remote start feature and take your vehicle to a local authorized Firstech dealer for service.

Once the vehicle shuts off your system is in reservation mode and the vehicle is ready to safely remote start.

IMPORTANT: By default, the system will lock/arm the vehicle upon setting reservation mode. Take care to not lock your keys inside the vehicle.

General System Functions

Cancelling Reservation Mode

Reservation mode will be cancelled for the following reasons;

- You did not activate the parking brake prior to turning off the ignition.
- You pressed the foot brake after the key was removed from the ignition.
- You released the parking brake after the key was removed from the ignition.
- You entered valet mode, opened the vehicles door, hood, trunk or set off the alarm.

Reservation Mode Settings

Reservation mode settings can be programmed with Option 1-6. It is recommended that reservation mode settings are programmed by your local authorized Firstech dealer.

Default 1: Locks doors when reservation mode is set.


Option 2: Does not lock doors when reservation mode is set.

Option 3: Reservation mode sets 10 seconds after the last door is closed, as opposed to immediately. This option will allow you to access the vehicle's rear doors, trunk or hatch prior to the system setting reservation and passively locking/arming.

Option 4: Shuts motor off before locking doors.

Trunk Release



Hold button  for 2.5 seconds to release the trunk or hatch. If you are in range, the remote will beep twice and the LEDs will flash indicating that the trunk release command has been successfully transmitted.



IMPORTANT: Trunk release is an optional vehicle feature that may require additional parts and labor.

General System Functions

Auxiliary Outputs / Window Roll–Down / Sliding Doors

Your system is equipped with two additional outputs that can be configured to control windows, open power sliding doors, open a power sliding moon roof, or even turn on a rear defroster. These outputs can be configured for pulsed, timed or latched settings. Your authorized Firstech dealer can set these outputs up accordingly. Using auxiliary outputs to control additional vehicle functions will require additional parts and can be rather labor extensive.



AUX

Tap button  for a half second to trigger auxiliary output 1. Tap button  for a half second to trigger auxiliary output 2. The vehicle's parking lights will flash once and/or siren chirp once indicating that the auxiliary outputs have been triggered.

By default, the system is in Secure Auxiliary Mode, which requires you to hold buttons  +  for 2.5 seconds prior to triggering auxiliary 1 or 2. To turn off secure auxiliary, ask your authorized Firstech dealer to turn on Option 4-5 to setting II.

Silent Arm / Disarm



 

Only available on alarm/starter and alarm systems. Upon lock/arm and unlock/disarm, you can eliminate vehicle's audible confirmation by muting the siren. Normally, the siren will chirp once to indicate the system is locked/armed and twice to indicate the system is unlocked/disarmed. To mute the siren tap buttons  +  simultaneously for a half second.

Advanced System Functions

The following section reviews advanced system functions. Many of these functions require multiple steps or additional programming by your local authorized Firstech dealer to be active.

Drive Lock / Ignition Controlled Door Locks

DRIVE LOCK

Tap buttons  +  simultaneously for a half second to turn drive lock on and off (also known as ignition controlled door locks). The vehicle's parking lights will flash once and/or siren chirp once to confirm drive lock is off. The vehicle's parking lights will flash twice and/or siren chirp twice to confirm drive lock is on.

IMPORTANT: Drive lock mode requires that the dealer turn on Option 1-9. Drive lock has three settings;

Default 1: Off

 
 
Option 2: Locks the doors when the ignition is on and after the brake is depressed.

Option 3: Locks the doors when the RPM's have reached two times that of idle speed (this setting requires that a tachometer wire is connected).

With both settings, the doors will unlock when the ignition is turned off. If using this feature on a manual transmission vehicle, the doors will unlock upon setting the emergency / parking brake.

Turbo Timer Mode



 



This feature can not be turned on with the 2 Way remote. The built in turbo timer keeps the vehicle's engine running for either 1, 2, or 4 minutes (programmable from dealer) after the vehicle key has been removed from the ignition. This feature will keep oil running through the turbo system to allow for appropriate cooling time. Tap buttons  +  simultaneously for a half second to turn on or off turbo mode. The remote will beep once and the turbo icon will illuminate to confirm that turbo mode is activated. The remote will beep twice and icon will disappear to confirm turbo mode is off.

IMPORTANT: To utilize this feature, the emergency / parking brake wire must be connected to the Firstech system. Consult your local authorized dealer for installation.

Advanced System Functions

2nd Car Mode (Multiple Vehicle Control)



This remote has the ability to operate a 2nd vehicle. Hold buttons  +  for 2.5 seconds to activate this feature. The remote's LEDs will flash and change to red confirming that 2nd car mode is activated. The remote will remain in 2nd Car Mode until you hold the  +  buttons for 2.5 seconds again. The remote will beep twice and the LEDs change from red to blue to confirm 2nd car mode is off.

IMPORTANT: 2nd car mode requires the remote to be programmed to a 2nd vehicle that is equipped with the same remote kit.

Secure Valet Switch



The optional Secure Valet Switch prevents the alarm from being put into valet mode through cycling the ignition on/off five times. The Secure Valet Switch is more secure than traditional toggle / valet switches because it requires a two digit code. **IMPORTANT:** The first two digits of the RPS unlock/disarm pass code will be the default pass code for the secure valet - you do not need to program them independently. If you are not using the RPS unlock, following the below procedures to program your secure valet pass code;

STEP 1: Turn on Option 3-10-III. (Dealer programmed option)

STEP 2: Turn ignition key to the on position.

STEP 3: Hold down the valet switch for 1.5 seconds. The LED on the valet switch will begin to flash rapidly with successful completion of this step.


 
STEP 4: Enter the first digit of the desired two digit pass code by depressing the switch the number of times that coordinates with the desired first number. For example, to enter 3, depress the switch 3 times, then wait.

STEP 5: The LED will confirm the first number by flashing BLUE slowly. Once the LED begins to flash rapidly, enter your second number by repeating step 4.

STEP 6: Turn the ignition off - the Secure Valet Switch is now programmed. Follow steps 3 - 5 to enter your Secure Valet code.

Advanced System Functions

Timer Start Mode

Timer start mode is used to cool or warm the vehicle automatically without use of the key or the remote. While engaged, timer start will activate even while the remote is out of range. Tap buttons  +  simultaneously for a half second to activate timer start mode. The remote will beep once and LEDs flash twice. Repeat the same step to turn off timer start mode. Timer start mode will be cancelled any time the vehicle is started manually or remotely. To change from the default setting to optional settings, see your place of purchase.

Cold / Hot Start Mode

Cold/hot start mode works in conjunction with timer start mode (see above) and the temperature sensor. It allows you to configure your timer start feature to check the vehicle's temperature prior to starting. All of these options require programming from your local dealer.

More Optional Sensors


You have the ability to add optional sensors from Firstech, LLC. You have the ability to protect your investment by adding a battery back up system to protect main power to your alarm or a DAS tilt sensor to protect expensive rims and tires.


Remote Coding / Programming Routine (S)

IMPORTANT: Every Firstech remote must be coded to the system prior to performing any operations. All remotes must be coded at the same time.

 
Programming : 2 Way 4 Button Remotes:

STEP 1: Activate Valet/Programming mode by manually turning the ignition key on and off (between the Acc & On positions) five times within 7 seconds. The vehicle's parking lights will flash once with the successful completion of this step.

STEP 2: Within 2 seconds after cycling the ignition for the 5th time, tap the Lock button  on **2 way remotes** or the (lock) button on **1 way remotes** for a half second. The parking lights will flash once to confirm the transmitter has been coded.

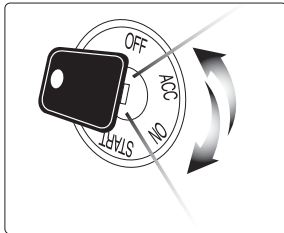

Exiting Programming: Programming is a timed sequence. The parking lights will flash twice signaling the end of programming mode.

Programming Multiple Remotes: After the confirmation flash given in step 2, code additional remotes by pressing button  on **2 way remotes** or the (lock) button on **1 way remotes**. The parking lights will flash once confirming each additional remote. All systems can recognize up to three remotes.

Remote Start Error Diagnostic

If the remote start fails to start the vehicle, the parking lights will flash three times immediately. Following those three flashes the parking lights will flash again corresponding to the error table.

Number of Parking Light Flashes	Remote Start Error
1	Motor running
2	Key in ignition on position
3	Door open (manual transmission only)
5	Foot brake on
6	Hood open
7	Reservation off (manual transmission only)
8	Tach or voltage sensing failure
9	DAS sensor movement
10	System is in Valet Mode

We recommend that you do not attempt any repairs on your remote starter. Contact your dealer or call us directly.

Limited Lifetime Warranty

Firstech, LLC Warrants to the original purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for the period of time that the original owner of this product owns the vehicle in which it is installed; except that the remote controller unit for the period of one year from the date of installation to the original owner of this product. When the original purchaser returns the product to the retail store where it was purchased or prepaid postal to **Firstech, LLC., 21903 68th Avenue South, Kent, WA 98032, USA** within the warranty period, and if the product is defective, Firstech, LLC, will at its option repair or replace such.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ANY AND ALL WARRANTIES ARE EXCLUDED BY THE MANUFACTURER AND EACH ENTITY PARTICIPATING IN THE STREAM OF COMMERCE THEREWITH. THIS EXCLUSION INCLUDES BUT IS NOT LIMITED TO, THE EXCLUSION OF ANY AND ALL WARRANTY OF MERCHANTABILITY AND/OR ANY AND ALL WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY AND ALL WARRANTY OF NON-INFRINGEMENT OR PATENTS, IN THE UNITED STATES OF AMERICA AND/OR ABROAD. NEITHER THE MANUFACTURER OF ANY ENTITIES CONNECTED THEREWITH SHALL BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights, which vary State to State.

Limited Lifetime Warranty

Firstech, LLC. is not RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE that may or may not resulted from the operation of Compustar. NOT WITH STANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Your Warranty

The product s warranty is automatically void if the date code or serial number is defaced, missing or altered. This warranty will not be valid unless you have completed the registration card at www.compustar.com within 10 days of purchase.

By Firstech LLC Version 1.0(C-05)

By Firstech LLC Version 1.0(C-05)

By Firstech, LLC.

Toll Free : 888-820-3690

21903 68th Ave S
Kent, WA 98032

Entretien de la télécommande – Remplacement de la batterie



Quand la batterie de votre télécommande bidirectionnelle est faible, vous ne recevrez plus les confirmations bidirectionnelles dans des secteurs dans lesquels normalement vous les recevez. Votre télécommande enverra seulement des commandes à votre véhicule. Les DEL de votre télécommande bidirectionnelle s'effaceront aussi après la transmission. Le seul entretien régulier demandé par ce système est le remplacement de la batterie de la télécommande. Aucune programmation n'est requise au moment du remplacement de la batterie.

Télécommandes bidirectionnelles Utilisez une pièce de 25 sous ou un tournevis plat pour retirer la couverture arrière de la télécommande. Vous pouvez insérer la pièce de monnaie ou le tournevis dans la petite rainure en bas de la télécommande près de la boucle porte-clés. Soigneusement retirez la couverture arrière en prenant soin de ne pas abîmer la carte de circuit. La taille de votre batterie devrait se trouver sur la batterie (Taille de la batterie: CR2450)

IMPORTANT: Assurez-vous de respecter la bonne polarité quand vous installez la batterie.

Télécommandes unidirectionnelles: Utilisez une pièce de 25 sous ou un tournevis plat pour retirer la couverture arrière de la télécommande. Vous pouvez insérer la pièce de monnaie ou le tournevis dans la petite rainure en bas de la télécommande près de la boucle porte-clés. Soigneusement retirez la couverture arrière en prenant soin de ne pas abîmer la carte de circuit. La taille de votre batterie devrait se trouver sur la batterie (Taille de la batterie: (2) CR2016) Vous pouvez acheter les batteries de rechange chez votre détaillant local Firstech ou dans un magasin d'électronique.

Fonctions des boutons de la télécommande bidirectionnelle

Button(s)	Durée	Fonction	Icônes DEL - Bleus	Icônes DEL - Rouge - Mode	Bip(s)
	demi-seconde	Verrouille les portières et si équipé, active l'alarme			Un
	3,5 secondes	Panique/localisateur de véhicule (fait clignoter les feux de stationnement et sonner la sirène et le klaxon).			N/A
	demi-seconde	Déverrouille les portières et si équipé, désactive l'alarme.			Deux
	2,5 seconds	Extension du temps de marche. Réinitialise le temps de marche pour la minuterie turbo ou pour le démarrage à distance.			Trois
	demi-seconde	Aux 1. Déclenche la sortie auxiliaire 1 (utilisée le plus souvent pour le dégivreur arrière ou pour l'ouverture des fenêtres).			Un
	2,5 secondes	Déverrouillage du coffre. Déclenche la sortie déverrouillage du coffre et ouvre le coffre du véhicule.			Deux
	demi-seconde	Aux 2. Déclenche la sortie auxiliaire 2 (utilisée le plus souvent pour le dégivreur arrière ou pour l'ouverture des fenêtres).			Un
	2,5 secondes	Si vous pressez ce bouton, votre véhicule démarrera. Répétez et le moteur s'arrêtera.			Un Active / Deux Désactive
	demi-seconde	Active et désactive les bips de la sirène. (Note: avec les bips de la sirène désactivés, celle-ci sonnera quand même si l'alarme est déclenchée).			Un Active / Deux Désactive
	2,5 secondes	Menu 1 de programmation des options. Pour installateurs seulement			Un

Introduction

Merci d'avoir acheté un système Firstech pour votre véhicule. Pour profiter au maximum de ce système, nous vous recommandons de lire attentivement le manuel suivant. Veuillez noter que ce manuel s'applique aux télécommandes FTX2400R-SS. Il n'est pas compatible avec les systèmes ALARM IT ou MAX IT. Ce manuel s'applique aussi des télécommande unidirectionnelle qui est inclus dans votre nouvelle trousse RF. Veuillez noter qu'il peut y avoir certaines fonctions qui ne sont pas disponibles pour votre système. Il peut y avoir aussi certaines fonctions dans ce manuel qui nécessitent une installation ou une programmation supplémentaire avant d'être actives.

Si vous avez des questions ou des commentaires, veuillez contacter votre détaillant d'origine. Pour plus d'informations, vous pouvez aussi contacter notre centre d'assistance à la clientèle au 888-820-3690.

Couverture de la Garantie

⚠ Attention : La garantie du fabricant sera annulée si ce produit est installé par quelqu'un qui n'est pas un représentant autorisé de Firstech. Pour les détails complets sur la garantie, veuillez consulter www.compustar.com ou la dernière page de ce manuel. Les télécommandes Firstech ont une garantie d'un (1) an à partir de la date originale d'achat. Les télécommandes Compustar Pro ont une garantie de deux (2) ans.

Vous pouvez enregistrer la garantie en ligne au www.compustar.com. Veuillez compléter le formulaire pour vous enregistrer dans les 10 jours suivant la date de votre achat. Nous n'incluons pas une carte d'enregistrement de la garantie avec chaque unité; l'enregistrement doit être fait en ligne. Pour vérifier que l'installation a été faite par un représentant autorisé, nous vous recommandons fortement de garder une copie de la preuve d'achat originale, comme par exemple la facture du vendeur, dans une place sûre.

Consultation rapide

Mode Valet

Quand vous faites l'entretien de votre véhicule ou quand vous le prêtez, vous devriez mettre le système en mode Valet. Le mode Valet empêche le système de faire le démarrage à distance et désactive toutes les fonctions de l'alarme.

Important : Quand la télécommande est en mode Valet, elle contrôle encore les systèmes de verrouillage et déverrouillage à commande électrique. Les feux de stationnement ne clignoteront pas.

Le système peut être mis en mode Valet de trois façons :

1. Tournez la clé du véhicule à la position "on" dans le contact et pressez, simultanément pendant demi-seconde les boutons (⏏ + 🔒). Les feux de stationnement clignoteront une fois et l'ACL montera des Z au dessus de l'image du véhicule pour confirmer que le système est en mode Valet. Répétez ceci pour enlever le Mode Valet. Les feux de stationnement clignoteront deux fois et les Z disparaîtront pour confirmer que le système est sorti du Mode Valet.

2. Si vous n'avez pas votre télécommande, vous pouvez activer le mode Valet en tournant la clé dans le contact 5 fois entre les positions < ON > et < OFF > à l'intérieur de 7 secondes. Les feux de stationnement clignoteront une fois pour confirmer que le système est en mode Valet. Peu après le premier clignotement, les feux de stationnement clignoteront deux fois.

3. Si votre système a été programmé pour l'option Valet sécuritaire (optionnel), vous ne pourrez pas mettre le système en mode Valet jusqu'à ce que vous ayez entré le bon code à l'aide du commutateur du valet sécuritaire. Le commutateur du valet sécuritaire est le petit bouton avec une brillante lumière bleue LED sur le devant et si installée, est le seul moyen de neutraliser l'alarme et/ou le démarrage à distance.

Jusqu'à sa programmation, le code par défaut est (3, 3).

Sortir le système du mode valet:

Toucher les icônes (⏏ + 🔒) pendant une demi-seconde pour sortir le système du mode valet. Dans les systèmes de démarrage et de démarrage/alarme, vous pouvez faire tourner la clé dans le contact à la position < ON > et presser la pédale du frein 10 fois. Ceci sortira votre système du mode valet. Si ceci ne fonctionnait pas, vous pouvez toujours reprogrammer votre (vos) télécommande(s). Veuillez vous référer à la section Routine de codage/programmation de la télécommande pour plus de détails.

Table Of Contents

4	Introduction
4	Couverture de la Garantie
5	Consultation rapide
11	Fonctions et description du DEL de la télécommande <ul style="list-style-type: none">● Mode Valet● Entretien de la télécommande - Remplacement de la batterie● Fonctions des boutons de la télécommande bidirectionnelle● Fonctions des boutons de la télécommande unidirectionnelle
12	Fonctions générales du système <ul style="list-style-type: none">● Envoyer des commandes● Recevoir des commandes● Verrouillage/Activation et Déverrouillage/désactivation actifs● Verrouillage/activation passifs● Fonction de démarrage à distance d'une transmission automatique● Fonction de démarrage à distance d'une transmission manuelle (mode réserve)● Déverrouillage du coffre● Sortes auxiliaires/Baisser les fenêtres/portières coulissantes● Activation/désactivation silencieuses

Table Of Contents

17	Fonctions avancées des systèmes <ul style="list-style-type: none">● Verrouillage en conduite/verrous de portières contrôlés par l'allumage● Mode turbo minute● Mode 2ème voiture (contrôle de plusieurs véhicules)● Commutateur de Valet sécuritaire● Mode de démarrage minute● Mode de démarrage par temps froid ou chaud● Détecteurs optionnels
20	Programme de la télécommande/Routine de programmation <ul style="list-style-type: none">● Programmation des télécommandes bidirectionnelles à 4 boutons
21	Diagnostic d'erreur du démarrage à distance
22	Garantie à vie limitée